


de Montageanleitung
 en Mounting instructions
 fr Instructions de montage
 sv Monteringsinstruktion
 nl Montagehandleiding
 it Istruzioni di montaggio
 fi Asennusohje
 es Instrucciones de montaje
 da Monteringsvejledning
 pl Instrukcja montażu
 cz Montážní návod
 hu Szerelési útmutató
 el Οδηγίες εγκατάστασης
 ru Инструкция по установке
 zh 安装指导
 ko 설치지침
 tr Montaj talimatları

Stellantriebe
 Actuators
 Servomoteur
 Ställdon
 Servomotoren
 Servocomandi
 Toimimootorit
 Actuadores
 Motorer
 Silowniki
 Pohony
 Szelepállító motorok
 Κινητήρες
 Приводы
 Приводы
 执行器
 모터형 구동기
 Aktuatörer


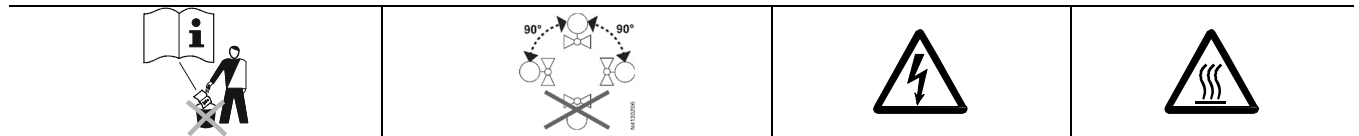


SUA21/3




1

VVI46..
VXI46..

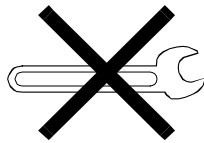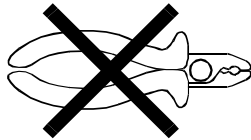


4842Z13

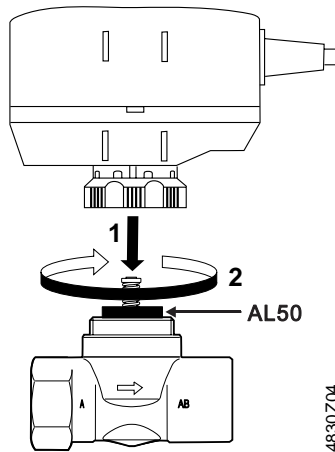


4830Z04



SUA21/3

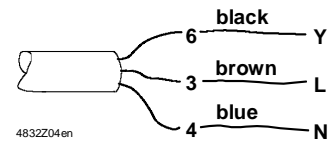

4832Z04en

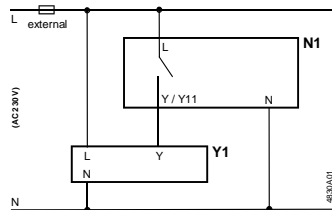

4830A01

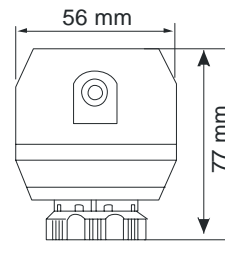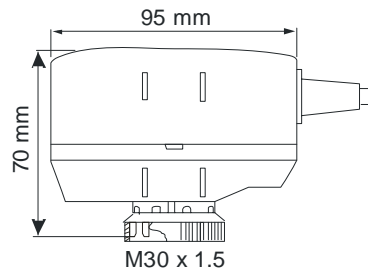

4830M01